




Parts list

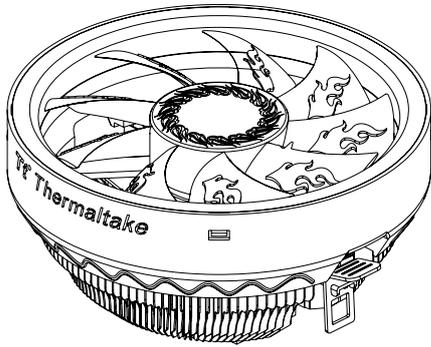

A x 1

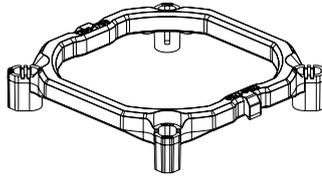

 B x 1



C x 1










D x 4







E x 4

INTEL

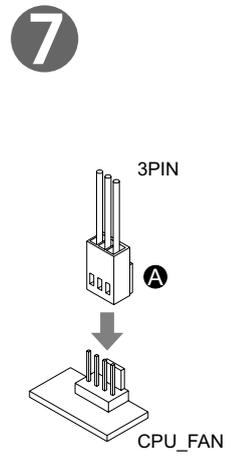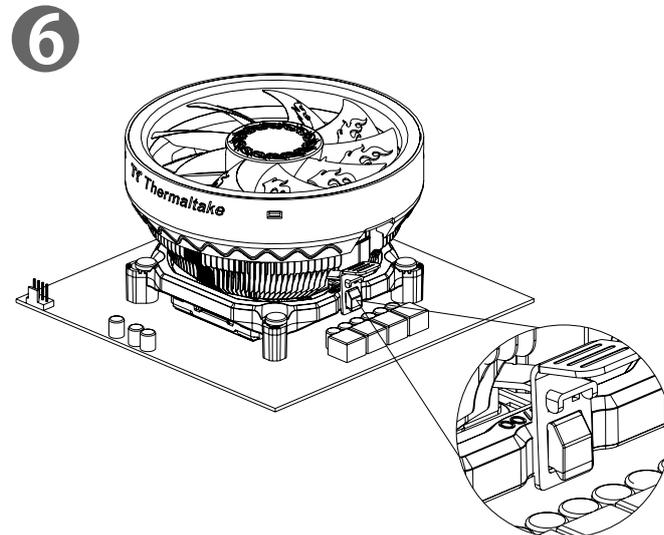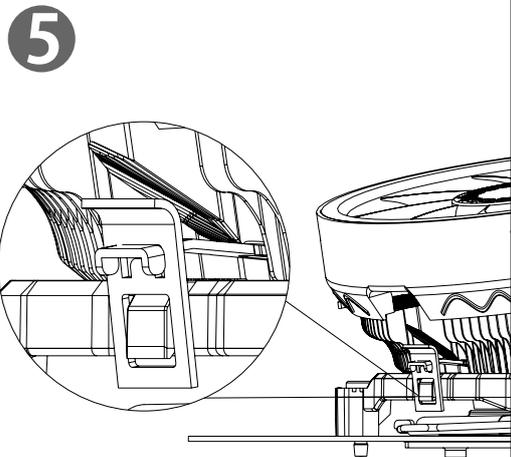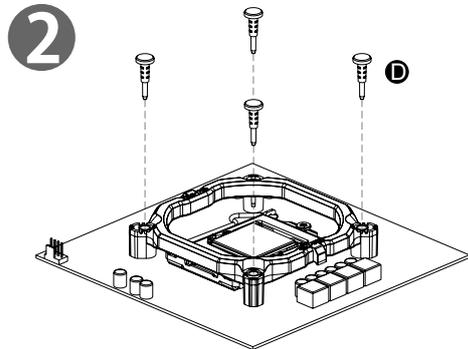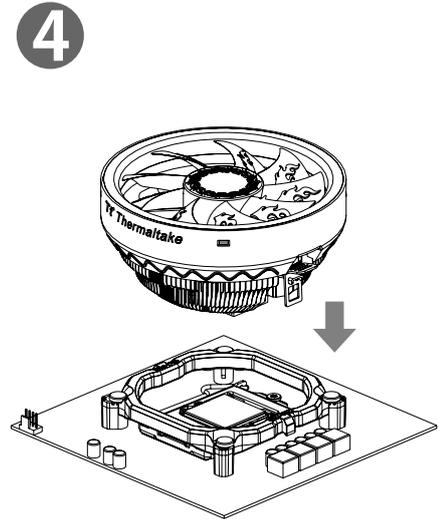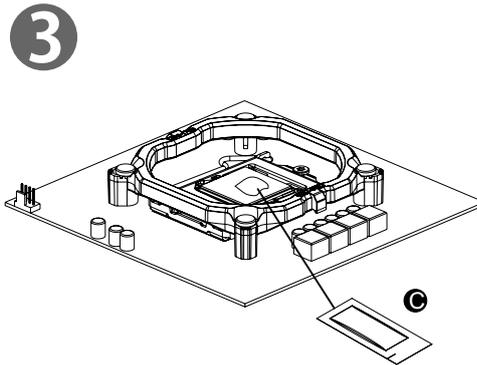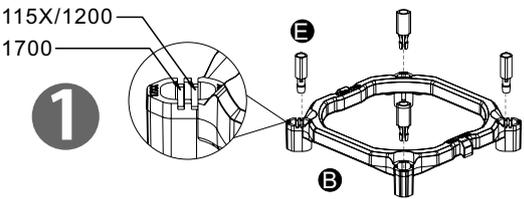


AMD

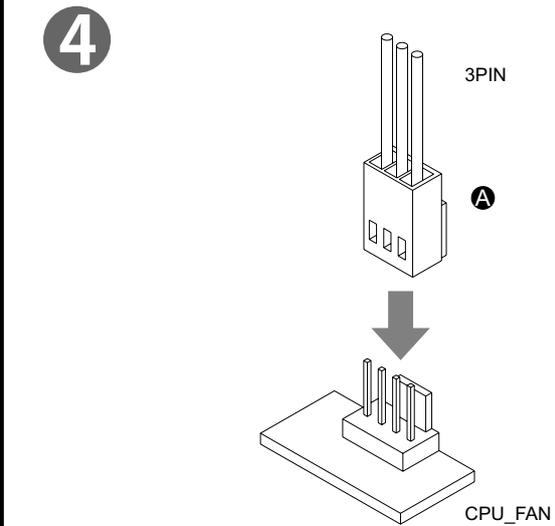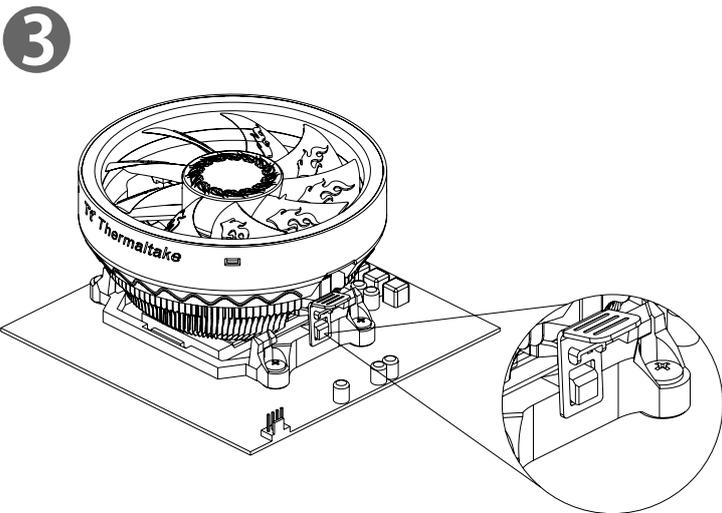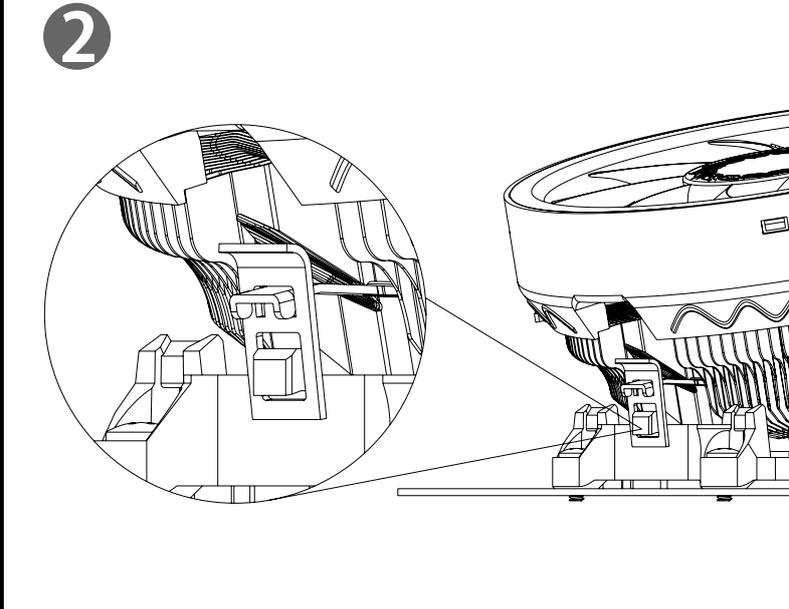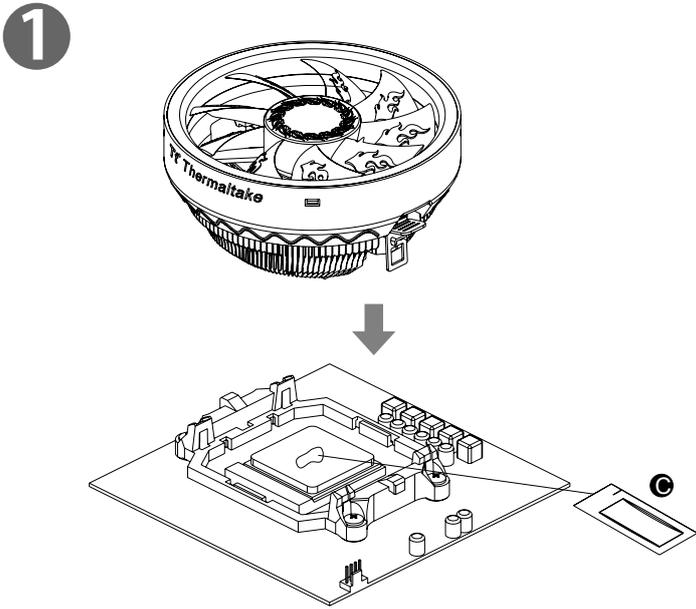


MB SYNC

CAUTION
Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the fans.


ASUS
Aura Addressable Strip Header(s)

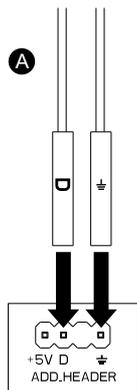

MSI
JRGB-strip Header(S)

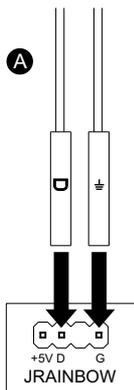

ASROCK
Addressable RGB LED Header(s)

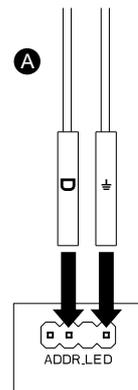

GIGABYTE
AOURS RGB Fusion with Digital LEDs

